

Complementing the Wireless Entertainment line is the Wireless Entertainment Desktop 7000, a stylish desktop paired with Microsoft's first rechargeable mouse. It delivers better wireless performance with 2.4 GHz Bluetooth technology - virtually no interference and right-out-of-the-box connectivity - and a battery indicator for ample warning before needing to replace keyboard batteries or recharge the mouse.

The Wireless Entertainment Desktop 7000 also harnesses the power of Windows Vista through one-touch access to popular items such as search, Internet services and other exclusive software features that enhance the Vista experience. The included Wireless Laser Mouse 8000 with 2.4 GHz Bluetooth technology and Microsoft's High Definition Laser Technology, delivers more responsiveness, more precision and smoother tracking. It also includes the new Instant Viewer and popular Magnifier and Tilt Wheel features.

Microsoft Wireless Entertainment Desktop 7000 features:

Keyboard features:

- Amazingly sleek, compact design
- Windows Vista button to launch shortcuts
- MCE (Media Center Edition) Button
- Windows Live Call Button
- Capacitive Touch Keys
- 2.4 GHz Bluetooth technology with First Connect Technology
- Battery Life Indicator
- Curved keyboard design delivers more comfort
- True wireless freedom with up to 30-feet of range
- Customizable Performance Slider

Wireless Laser Mouse 8000 features:

- Horizontal charging station
- Customizable Performance Slider
- Battery Life Indicator
- Microsoft's 2.4 GHz Bluetooth technology
- First Connect technology
- True wireless freedom with up to 30 feet of range
- Proprietary High Definition Laser Technology
- Instant Viewer tool
- Magnifier tool
- Real metal accents

Things to Try with the Wireless Entertainment Desktop 7000

Once you've plugged the charging station and receiver into available USB ports and installed the included IntelliPoint and IntelliType software, try this:

- 1. **Try digital speed dialing!** If you have a Windows Live Messenger account, press the Windows Live Call Button to launch your Buddy Picker, a window that will display only your currently online buddies so you can guickly initiate a video call with your LifeCam or start chatting.
- 2. Press the new Windows Start Button to pull up the Windows Start menu. If you have Windows Vista, now you can easily search for and open documents. If you are using Windows XP the button will launch the regular Windows Start menu.
- 3. If you have Windows Vista, press the new Windows Gadget Button to open customizable content such as weather information, news, traffic and maps. To set your own personalized Gadgets simply click on "Add Gadgets."
- 4. If you have a MCE PC, you can use the keyboard to control your online media. Move over to your couch (or anywhere up to 30 feet away), press the Media Center Green Button to launch Windows XP Media Center Edition.
- 5. Even when you're on the couch, you don't need a mouse. Use the new navigation pad to control the cursor right from your keyboard. It works just like a laptop touchpad so you can IM a buddy and get right back to watching your movie or show.
- 6. Rest your fingers on the keys and experience the six-degree curve, which allows for easier and more comfortable typing over extended periods.
- 7. Try out the new Instant Viewer tool. Open a number of programs and documents on your computer. Press down on the scroll wheel to activate Instant Viewer. Now you can point and click on any document or application you want to jump to or use the arrow keys on your keyboard to go from application to application.
- 8. Move the mouse around, and compare it to your current one. Notice the symmetrical design, real metal top-case and how responsive it feels.
- 9. Open a large document such as a spreadsheet and enlarge a section of it by pushing the Magnifier button (located on the left side of the mouse). Then hold down the Magnifier button, and move the scroll wheel up and down to change the size of the magnification.